




COOKTOP PARTS


For Model: RC8720EDB0, RC8720EDW0
(Black) (White)

30" ELECTRIC
DOWNDRAFT COOKTOP

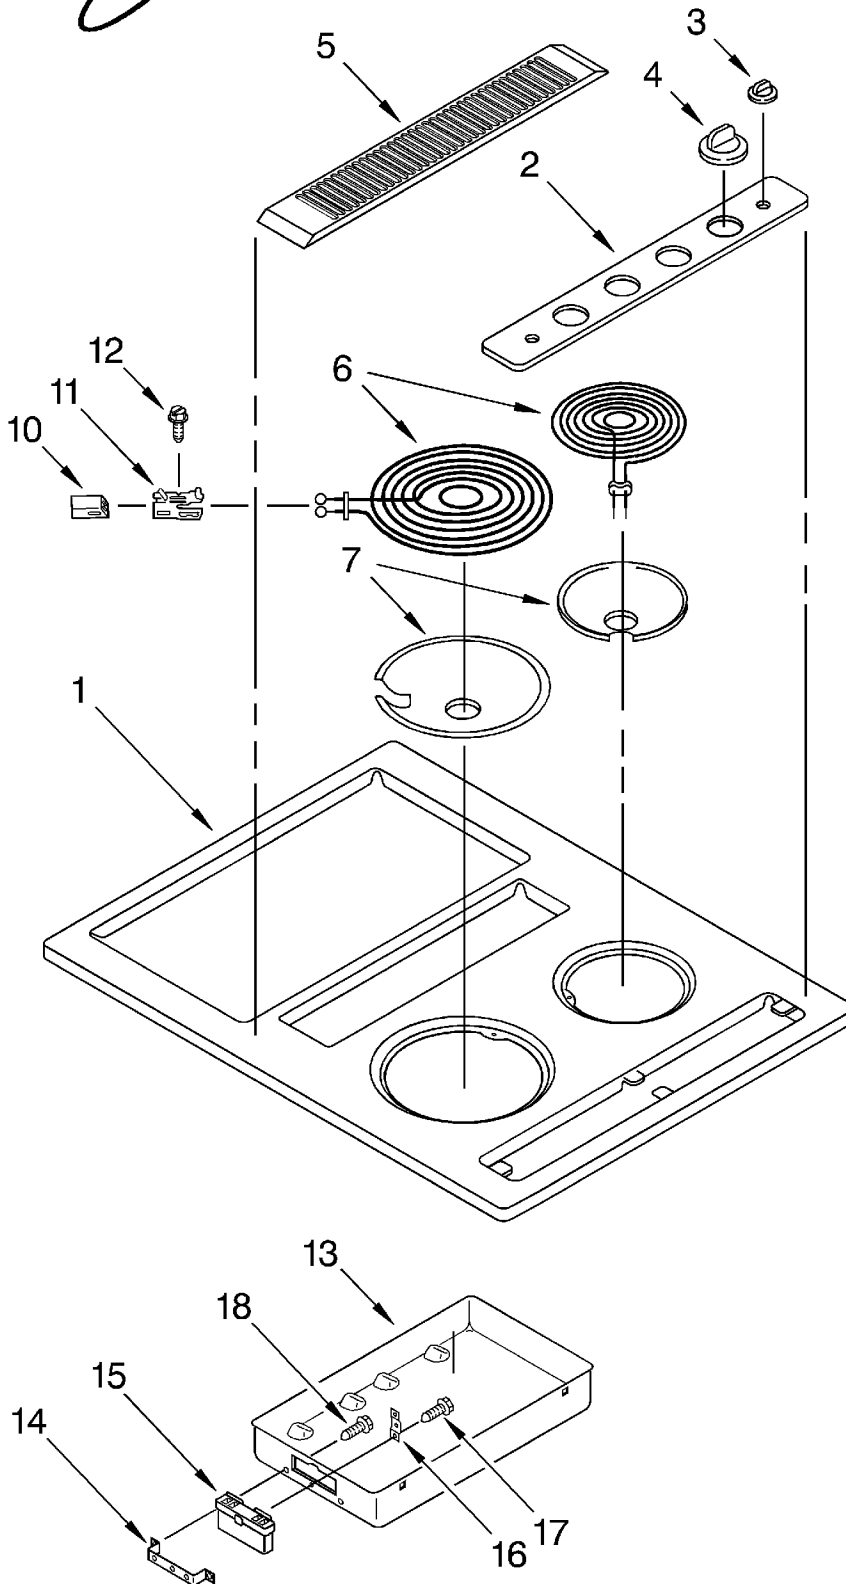

1		Cooktop
	4381739	Black
	4381740	White
2		Glass, Control Pnl
	4381741	Black
	4381742	White
3		Knob, Fan
	4381634	Black
	4381635	White
4		Knob, Control (4)
	4381744	Black
	4381745	White
5		Cover, Vent
	4381746	Black
	4381747	White
6		Element, Surface
	4381748	6"
	4381750	9"
7		Pan, Drip
	4381749	6"
	4381751	9"
10	4381752	Receptacle, Elmnt.
11	4381753	Brkt, Receptacle
12	4381754	Screw, Bracket (2)
13	4381755	Pan, Module
14	4381756	Brkt, Plug Block
15	4381757	Block, Plug
16	4381758	Clip, Grounding
17	4381759	Screw, Grounding
18	4381760	Screw, Bracket


BLOWER PARTS
For Model: RC8720EDB0, RC8720EDW0
(Black) (White)

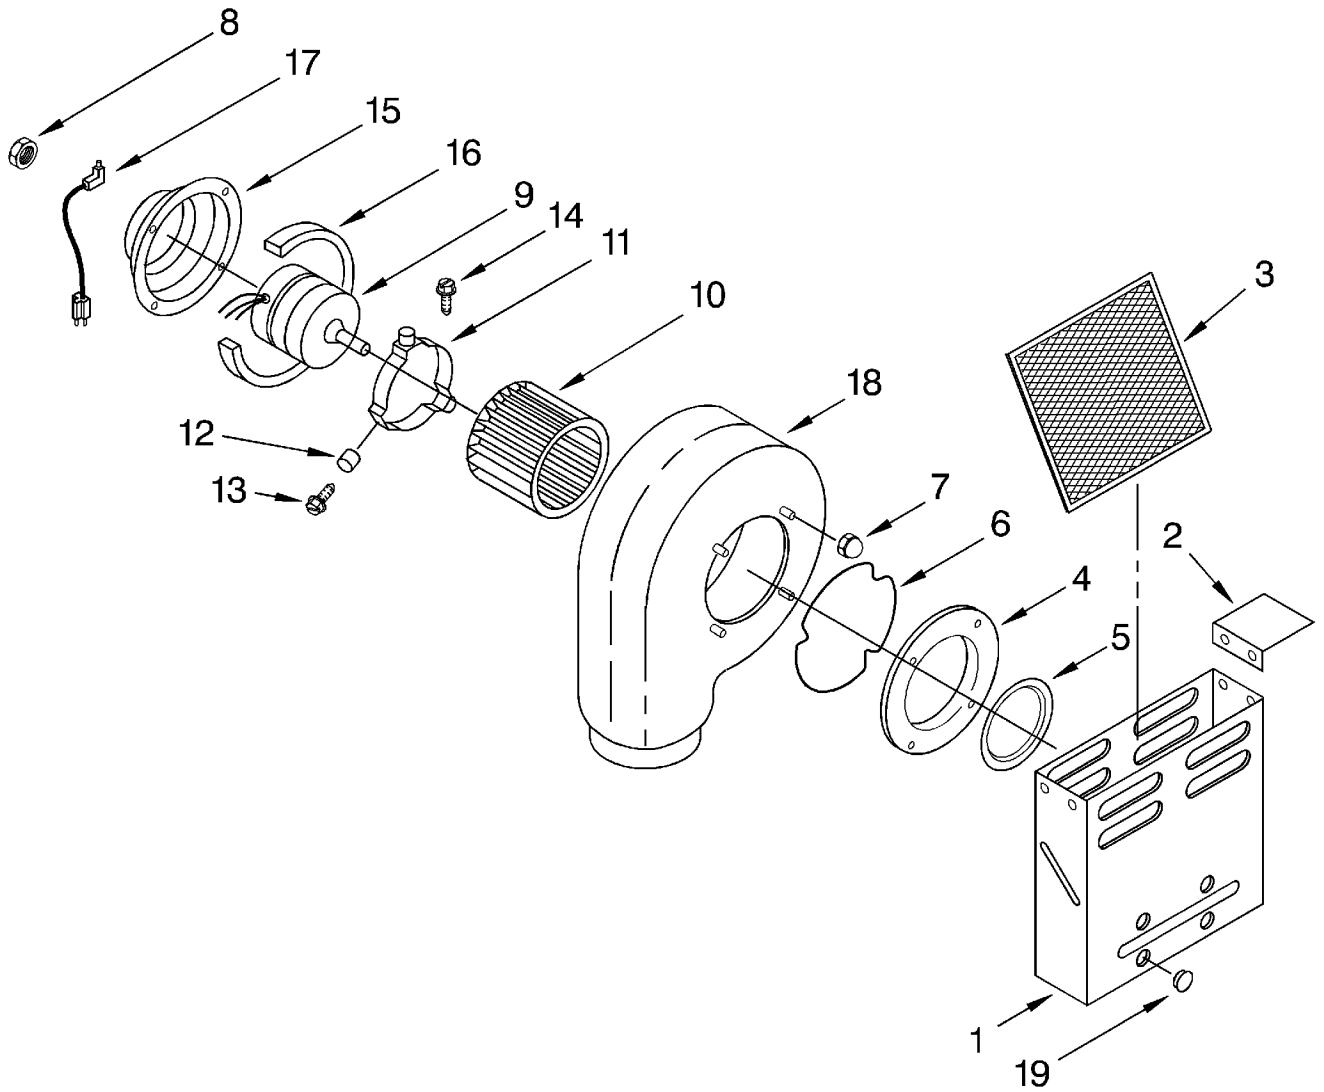

1	4381775	Plenum
2	4381776	Bracket, Filler
3	4381777	Filter, Grease
4	4381705	Ring, Inlet
5	4381720	Ring, Restrictor
6	4381716	Spring, Retainer
7	4381713	Locknut
8	4381726	Cap, Nut (4)
9	4381778	Motor, Blower
10	4381702	Wheel, Blower
11	4381699	Band, Motor
12	4381697	Spacer (3)
13	4381698	Screw, Spacer (3)
14	4381696	Screw, Band
	4381695	Nut, Band
15	4381779	Cover, Motor
16	4381701	Gasket, Foam
17	4381780	Cord, Power
18	4381706	Housing, Blower
19	4381781	Plug, Button

BURNER BOX PARTS

For Model: RC8720EDB0, RC8720EDW0
(Black) (White)

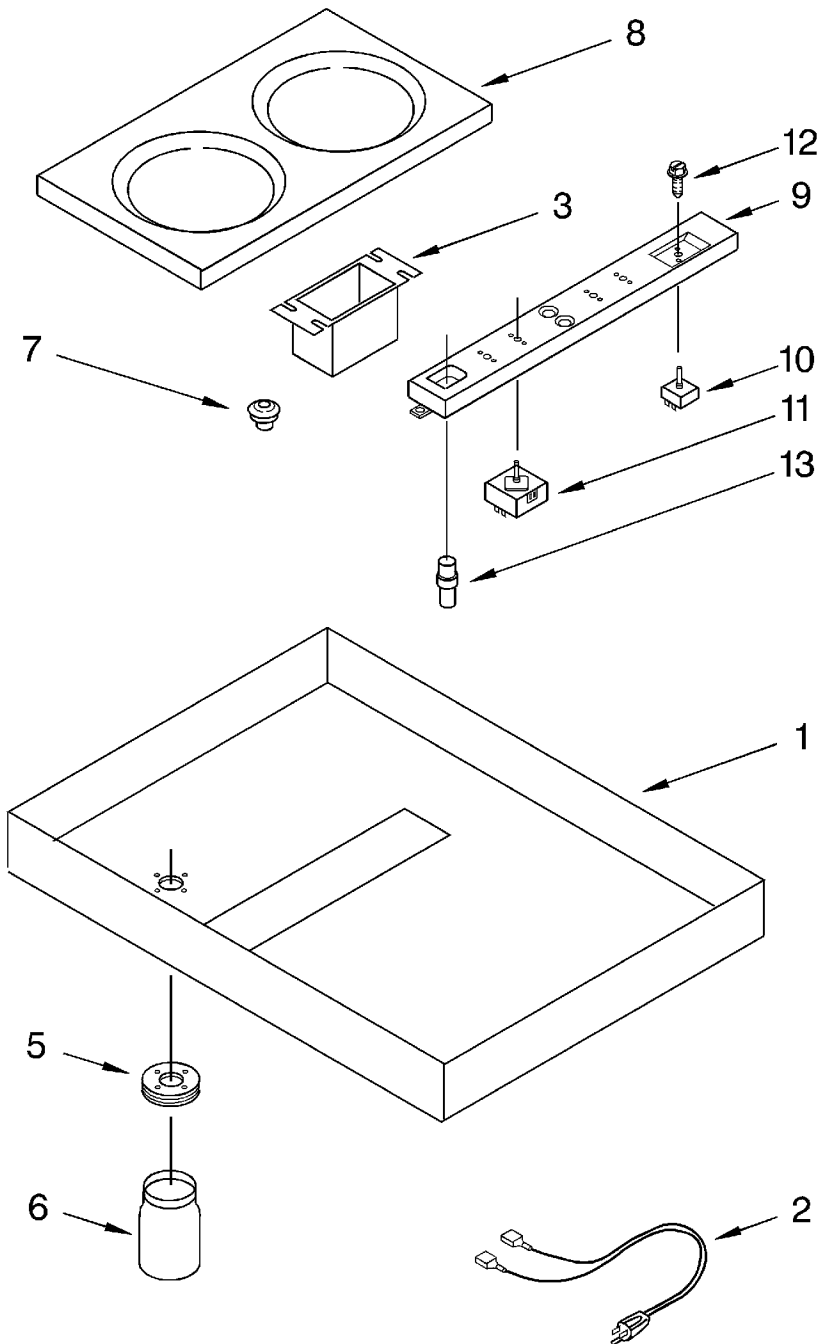

1	4381762	Burner Box
2	4381763	Cord, Power
3	4381764	Box, Junction
	4381679	Screw (4)
	4381765	Cover, Box
5	4381680	Lid, Grease Jar
6	4381681	Jar, Grease
7	4381766	Relief, Strain
8	4381767	Insert, Burner Box
	4381768	Screw, Insert
9	4381769	Bracket, Switch
10	4381622	Switch, Fan
	4381770	Grommet, Switch
	4381771	Screw, Switch (2)
11	4381772	Switch, Infinite
12	4381773	Screw, Switch
13	4381774	Light, Indicator

Following Parts Not Illustrated


4381761	Harness, Switch
4381785	Hardware, Mounting

LITERATURE PARTS

LIT4381591	Guide, Use & Care
LIT4381589	Instructions, Installation

COIL MODULE (RCM10DB,RCM10DQ)


For Models: RC8720EDB0, RC8720EDW0
(Black) (White)

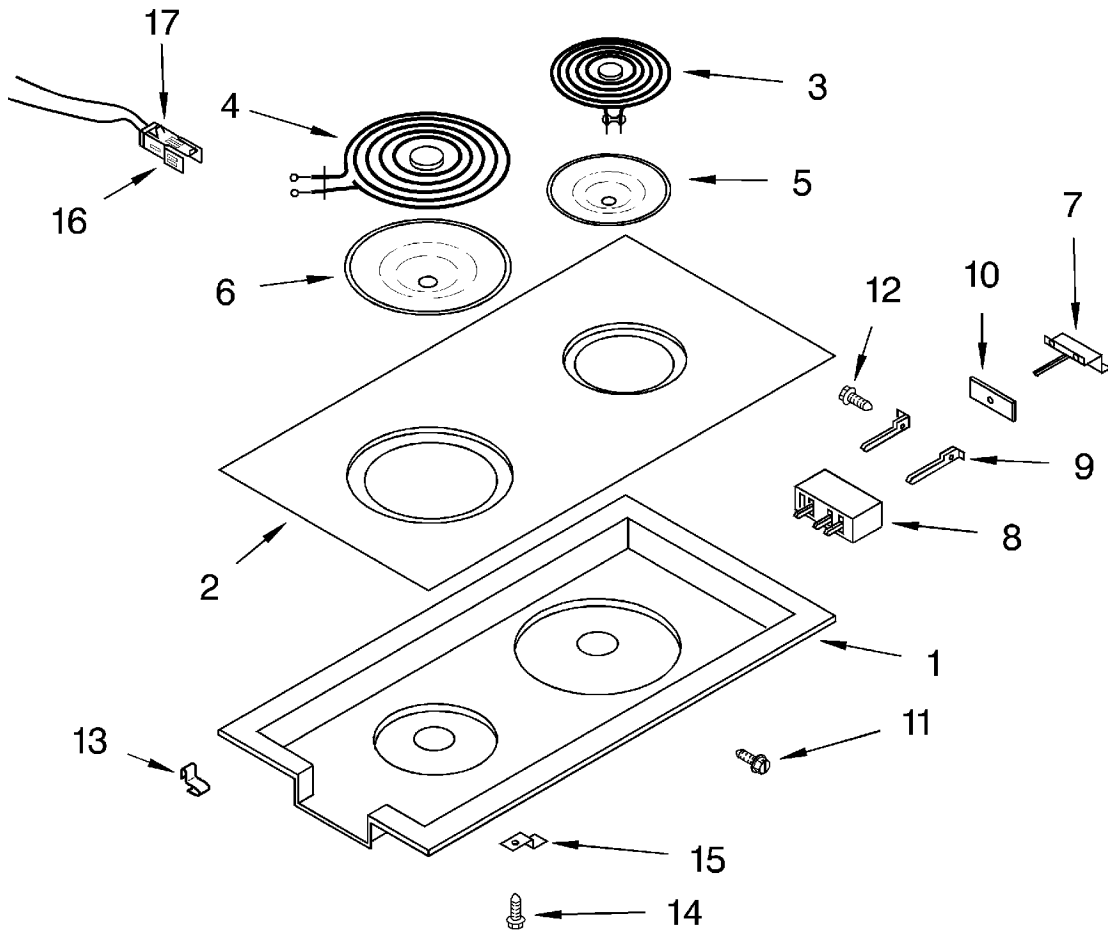

1	4381810	Pan, Module
2		Top, Module
1	4381811	Black
	4381812	White
3	4381748	Element, 6"
4	4381750	Element, 8"
5	4381749	Bowl, Drip (6")
6	4381751	Bowl, Drip (8")
7	4381796	Bracket, Retainer
8	4381793	Block, Terminal
9	4381794	Spade, Contact
10	4381795	Insulator, Spade
11	4381760	Screw, Pan (8)
12	4381797	Screw, Spade (3)
13	4381813	Clip, Top (4)
14	4381754	Screw, Receptacle
15	4381753	Bracket, Rcptcl.
16	4381814	Clip & Wires
17	4381815	Receptacle, Ceramic

RADIANT MODULE (RCM30DB, RCM30DQ)


For Models: RC8720EDB0, RC8720EDW0
(Black) (White)

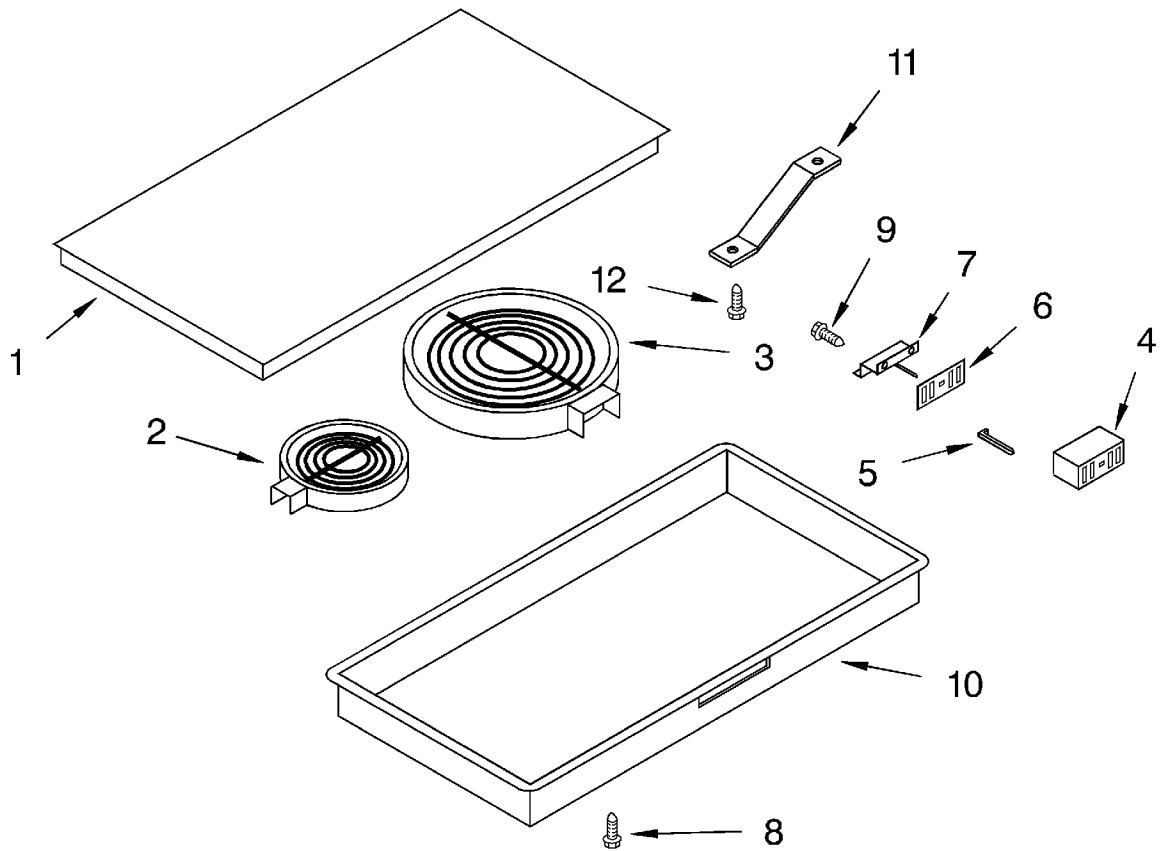

1		Top, Module
	4381788	Black
	4381789	White
2	4381790	Element, 6" (1200 W)
3	4381792	Element, 8" (1700 W)
4	4381793	Block, Terminal
5	4381794	Spade, Contact
6	4381795	Insulator
7	4381796	Bracket, Retainer
8	4381760	Screw, Pan (8)
9	4381797	Screw, Contact (2)
10	4381798	Pan, Module
11	4381799	Bracket, Support
12	4381710	Screw, Bracket

GRILLE MODULE (RCM20DB, RCM20DQ)

For Models: RC8720EDB0, RC8720EDW0
(Black) (White)

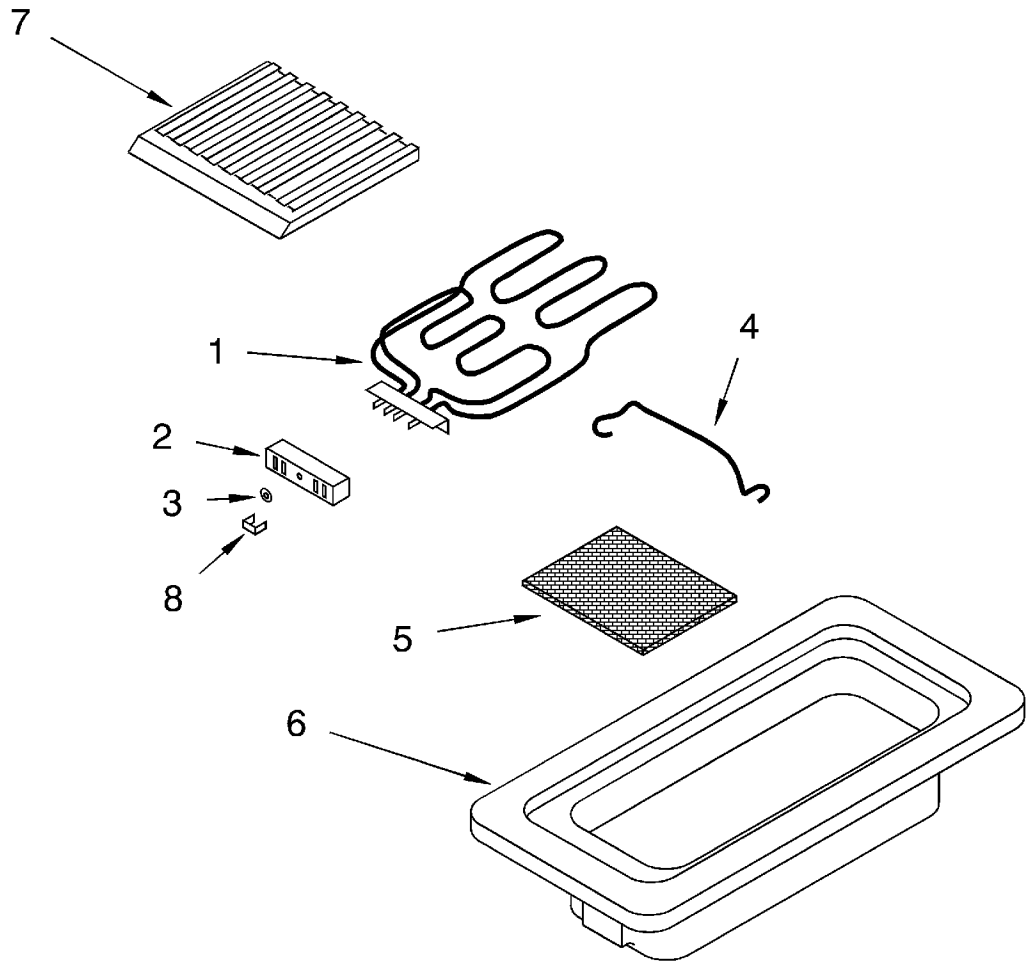

1	4381802	Element, Grille
2	4381793	Block, Terminal
3	4381804	Pushnut
4	4381805	Support, Element
5	4381806	Plate, Rock
6	4381807	Pan, Storage
7	4381808	Grate, Grill
8	4381809	Clip